

Care instructions



The Pages

Your Framebook pages are printed on fine art paper bonded to an anisotropic magnetic sheet. Handle them gently, by the edges when possible. We recommend turning the pages periodically to allow the magnetic bond to rest evenly. When you are away for an extended period, leave your Framebook closed.



The Frame

Your frame is crafted in wood with no glass barrier, allowing you to experience each image in its purest form. Dust it gently with a soft, dry cloth. Avoid abrasive materials or chemical cleaners.



Environment

Like any fine art piece, your Framebook is designed for indoor display. Keep it away from direct sunlight, heat sources, and high humidity. Stable room temperature and moderate humidity are ideal. Avoid kitchens, bathrooms, and unventilated spaces.

Important

Always detach the Framebook before moving or hanging the frame. Never transport or reposition the frame with the Framebook attached. Store the Framebook separately in a safe place.

What to Avoid

Water, liquids, and moisture of any kind. Direct sunlight or UV exposure. Proximity to radiators, fireplaces, or heating vents. Stacking heavy objects on your Framebook.